
SUSPENSION BASE HOLE PATTERN

S022 & S025C

Bottom Mounting Pattern

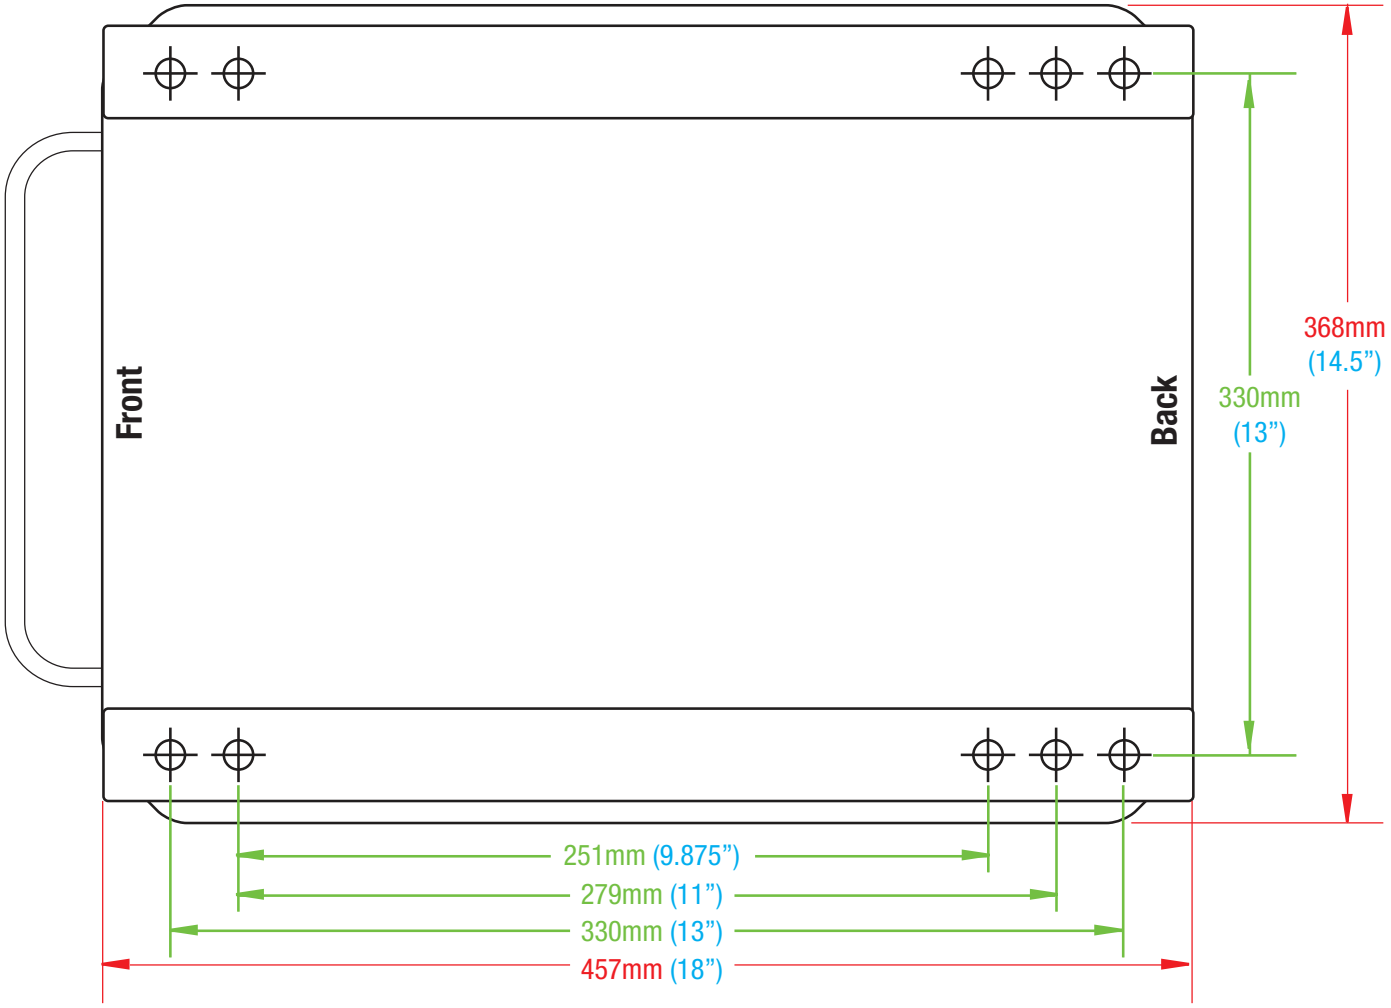

CONVOY™ SERIES


* Mounting Pattern Dimensions
* Measurements in Inches
* Overall Dimensions

PHONE: 1-800-667-7328 • **SHOPSEMITRUCKSEATS.COM**

SUSPENSION BASE HOLE PATTERN

S022 & S025C

Top Mounting Pattern

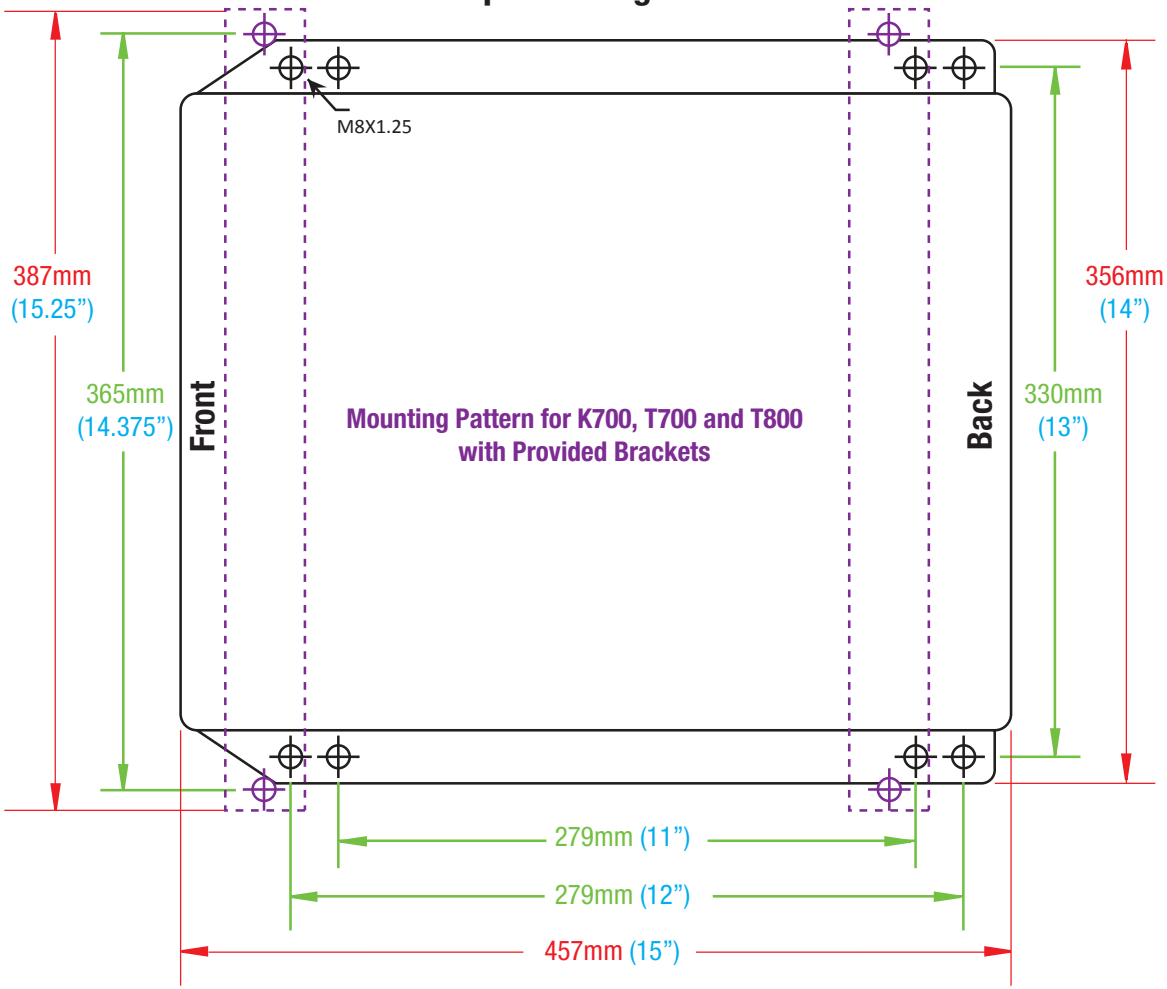

CONVOY™ SERIES

* Mounting Pattern Dimensions
* Measurements in Inches
* Overall Dimensions

PHONE: 1-800-667-7328 • **SHOPSEMITRUCKSEATS.COM**